



# The instructions for RZ EL01-25 electronic cabinet lock, v.2

## 1. The card type (Four types)

- Management cards (1 piece),
- master card (Maximum 3 pieces),
- service card (Maximum 20 pieces),
- customer cards (1 piece).

## 2. Setting method

(The management card has been setted. Please follow the sixth steps if resetting is needed.)

2.1. Management card: Tapping the first card is the Management card. Management card can be used by setting and deleting.

*Note: Tapping 4 times of the management card, door will be opened after the blue light stops flashing.*

2.2. Single card to open door: Using the management card tape 1 time, tape the guest card when the blue light is flashing. The door can be opened by the guest card after stop flashing.

*Note: The old guest card will be automatically cancelled if a new guest card is setted and open the door.*

2.3. Double card to open door: Using the management card tape 2 times, tape the service card when the blue light is flashing. The door can be opened by the guest card and the service card together after stop flashing.

*Note: Using the management card tape 2 times to continue setting if more service cards are needed. (The service cards can be setted when needed).*

2.4. Master card: Using the management card tape 3 times, tape the master card when the blue light is flashing. The door can be opened by the master card after stop flashing.

*Note: The master cards can be setted when needed.*

2.5. Empty all the information: Using the management card tape 5 times, the blue light flashes 2 times with DI-DI sound. All the setting is empty as factory reset.

*Note: Only the management card function are kepted.*



2.6. Reset button: Press the button through a small hole after the lock body by tool for 2 seconds, the blue light flashes with DI sound. All the information is clear.

### **3. Attention**

3.1. The management card which can be setted and deleted, should be kept properly. All the information should be resetted if management card is missed.

3.2. Once the master card is setted up, it can open all locks, so please take care of it.

3.3. If the cabinet lock is too low battery to open, the external power supply box can be used to open by connecting the panel.

3.4. The lock bolt is in the open state when clear by pressing reset button, and no alarm before setting customer card. 8 times of Di sound with flashing blue light after setting customer card and service card, which means the alarm function starts.