



## **Instructions for programming locks RZ EL01-103.**

Key functions are divided into 6 types:

- \* Master Key (Programming Key)
- \* Manager key (used for emergency opening in case of loss/damage of the guest key)
- \* Guest key (individual visitor key)

### **Installing the Lock Pick (Programming Key)**

Press and hold the reset button for more than three (3) seconds until one beep sounds. Wait for the operation to end - the indicator will stop flashing, the tab will "hide" in the case. Bring the lock pick (no more than 1) to the card reading area, a single beep will sound. The indicator light came on and went out. The operation was successful.

**The RZ EL01-103 lock has 2 programming modes:**

#### **1. Individual (fixed) access mode.**

To activate the mode, you need to program a guest key (no more than 35 pcs). Bring the lock pick close to the sensor 2 times and the light will start flashing. While the indicator light is flashing, hold the guest key close to the sensor. The operation is complete.

If necessary, you can set a manager key (no more than 3). Bring the lock pick to the sensor 3 times, the indicator will start flashing, while the indicator is flashing, bring the manager key to the sensor. If you need to install several control keys, then bring them continuously while the indicator is flashing. Wait for the surgery to end.

**(make sure the included keys unlock the lock)**

**! In case of loss/damage to the guest key, or the leader key, bring the lock to the sensor 1 time, the lock will open.**

**! To reset the keys, bring the lock pick close to the sensor 5 times. Wait for 2 long beeps. The settings are reset, only the lock pick remains in the lock memory.**



## 2. Free Access Mode

In the factory settings, the individual (fixed) access mode is set. To activate the "free access" mode, press and hold the reset button for more than 3 (three) seconds until a single beep sounds.

1. Bring the lock pick (no more than 1) to the card reading area, a single beep will sound. The indicator light came on and went out. The operation was successful (the lockpick was saved).
2. Hold the lock pick 3 times, the indicator light will flash. While the indicator light is flashing, hold the manager key away from the sensor. If you need to install several control keys, then bring them continuously while the indicator is flashing. Wait for the operation to complete (the key manager is saved, used for emergency opening in case of loss/damage of the guest key).

**(make sure the included keys unlock the lock)**

3. Bring the lock pick 4 times, the indicator will start flashing for about 10 seconds, and 2 short beeps will sound, the lock has entered free access mode, the lock can be used.

**To return the lock to individual (fixed) access mode:** Hold the lock pick 4 times, the indicator will flash for about 10 seconds, and 2 short beeps will sound, the lock has returned to individual (fixed) access mode.

Reference.

\* The lock is powered by 4 (four) AA size power supplies (finger batteries).

\*\* When the voltage in the power supplies decreases and the lock locks, the lock starts beeping, if you did not have time to replace the batteries, use a micro-USB cable and a power bank for EMERGENCY OPENING, apply power, open the lock, and change the batteries. The cable connector is located on the outside of the lock.

**IT IS STRICTLY FORBIDDEN TO CHARGE THE LOCKS IN THIS WAY!!**