






### 3. Features

1. Decode: When password been forgotten, you can get the  
When password been forgotten, you can get the decode number by providing the code on the lock body to the distributor to decode. The password will be changed back to the original management password "4321", user password "1234"
2. Introduced with Anti-Theft Technology and Fake PIN password function; you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits
3. Auto-alarm will be activated when input wrong password 4 times and the lock will be died for 60 seconds.
4. Automatic power shortage prompts (When lock show this signal  ).  
The lock cannot be operated when the voltage is very low
5. Equipped with 3V Cr2032 batteries, last password will not be lost after changing the battery.

### 4. Treatment of some common problems.

Problem	Primary cause	Way to solve the problem
When input the password, alarm twice di..di.. Mean while   twinkle one time	Too low voltage	Replace batteries
When input the password, alarm di..di..meanwhile signal  is on, lock cannot be opened	Knob is not in the right position	Turn knob in the right position
Touch button without sound, lock can be opened	Buzzer broken	Change buzzer

## RZ M-1603BK-20 Work Manual

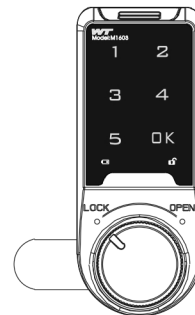


**Контакти**  
ТОВ «Основа-Маркет»  
Україна, м. Харків, пров. Сімферопольський, 6  
+38 057 744 27 64, +38 066 456 89 31, +38 067 656 89 31  
sales@rz-market.com

**Графік роботи:**  
пн-пт 8:00 - 17:00, сб-нд вихідний

**Contacts**  
LLC "Oshnova-Market"  
Ukraine, Kharkiv, prov. Simferopolsky, 6  
+44 788 075 08 85  
a@rz-market.com

**Opening hours:**  
Mon-Fri 8:00 - 17:00 (Kyiv), Sat-Sun closed

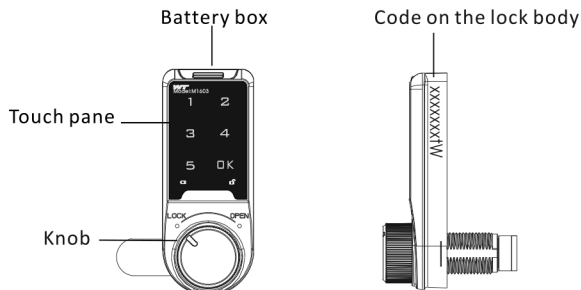

Low voltage indicator light

Unlocking Indicator light

## How to operate

### ■ Lock & unlock

#### Unlock

1. Input factory default password “1234+OK”, or Input factory default management password 4321+OK
  2. Buzzer gives out a long di... Sound
  3. When the green indicator light is on
  4. Rotate the knob 90 degree within 3 seconds to open the lock
- When password is wrong alarming sound di.. di.. Di.. 3 times.
- When lock shows this signal means low voltage
- Note: when input management password to unlock, user password will be changed back to default 1234

#### Lock

Rotate back the knob 90 degree to lock position

#### Setting

##### 1- Change password

1. Input current password “1234+OK” OR input factory default management password “4321+OK”, buzzer gives out a long di sound, the unlocking indicator light will twinkle quickly.,
  2. Press OK at least 2 seconds, unlocking indicator light twinkle, input new password, press OK, when you heard a long di sound means password already been changed.
- \*Password can be consisted of 4-15 digits, pls note that the management password can not be the same as user password

## 2- Turn on public mode, set temporary password

### Turn on public mode

1. Input current management password + , buzzer gives out a long di..... Sound, Unlocking indicator light is on
2. Press OK at least 2 seconds, unlocking indicator light twinkle, press OK again.
3. Input “4 4”, press , when you heard a long di.... sound means public mode already been set.

### Set temporary password

1. Press . Unlocking indicator light will twinkle
  2. Input the new password consisted of 4-15 digits
  3. press ok to unlock, is on with a long di....sound, temporary password already been set.
- Note: flash one time every 3 seconds means the lock has already be taken

Temporary password can be used for 1 time only

## 3- Turn off public mode

1. Input current management password + , buzzer gives out a long di..... Sound, Unlocking indicator light is on
2. Press OK at least 2 seconds, unlocking indicator light twinkle, press OK again.
3. Input 4 3, press , when you heard a long di.... Sound, means public mode already been turned off.

## 4- Turn on/off Fake Pin code function

1. Input current management password + , buzzer gives out a long di..... Sound, Unlocking indicator light is on
2. Press OK at least 2 seconds, unlocking indicator light twinkle, press OK again.
3. Input 4 2, press OK, when you heard a long di sound means Fake Pin code mode already been turned on.  
Input 4 1, press OK, when you heard a long di sound means Fake Pin code mode already been turned off.

Introduced with Anti-Theft Technology and Fake PIN password function you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits.